


AURA[®] THRESHOLD RAMPS

FITTING GUIDE

LENGTH:

AAS4551 ■ AAS4552 ■
AAS4553 ■

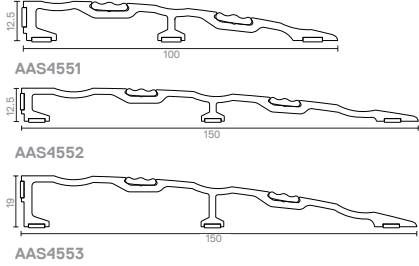

CONTENTS	TOOLS REQUIRED
<ul style="list-style-type: none"> • Aluminium threshold ramp • Bag of screws & plugs • Reversible tread strips • Acoustic bedding pads affixed • Fitting guide 	<ul style="list-style-type: none"> • Tape measure • Pencil or marker • Saw (power/hack) • Power drill • 6mm masonry drill

For more information please call:

+61 (02) 9905 0868

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic, mechanical, photocopying, recording or otherwise without the written permission of Lorient Polyproducts Limited. © Lorient Polyproducts Ltd 2018

www.lorientgroup.com
+61 (02) 9905 0868

Lorient Pty Ltd
Unit 30, 9 Powells Road
Brookvale 2100
New South Wales
Australia



**AAS4551
AAS4552
AAS4553
THRESHOLD
RAMPS**

INSTALLATION DETAIL

It is not necessary to remove the door from its hinges.

STEP 1

Remove the ramp from the packaging and measure the door width, between jambs or door stops to determine the ramp length required.

STEP 2

Measure the threshold and mark with a pencil the desired length (and profile if cutting around the door stop).

STEP 3

Pull back tread strips and cut the threshold ramp to length using a saw.

STEP 4

Position the ramp on the door sill in required location (ensuring edge of carpet is butted up against back wall of ramp).

STEP 5

Using the pre-drilled and countersunk holes and with the plate in position, mark hole centres on the floor.

Set plate to one side and using a masonry drill, create fixing holes and insert plugs. Clean away dust.

Screw fix the threshold ramp in place using screws supplied. Replace reversible tread strips to conceal fixings.

STEP 6

Where the threshold ramp meets the door stop, sealant may be applied to prevent ingress of moisture.

STEP 7

Check to ensure the door can open and close without the need for excessive force.

NOTE

For effective operation, the AAS4551 and AAS4552 threshold ramps require a minimum of 15mm clearance between the door and the floor. The AAS4553 threshold ramp requires a minimum of 21mm.

IMPORTANT

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

DISCLAIMER

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete installation detail without prior notice.