


FITTING GUIDE **7503**

AAS 7503

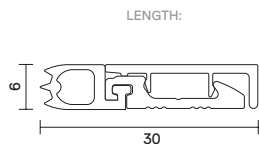

CONTENTS

- Aluminium carrier
- Decorative cover plate
- Silicone gasket
- Bag of screws
- Fitting guide

TOOLS REQUIRED

- Tape measure
- Pencil or marker
- Saw (power/hack)
- 2.5mm drill bit
- Drill
- Screw driver
- Knife

For more information please call:

+61 (02) 9905 0868

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic, mechanical, photocopying, recording or otherwise without the written permission of Lorient Polyproducts Limited. © Lorient Polyproducts Ltd 2018

www.lorientgroup.com
+61 (02) 9905 0868

Lorient Pty Ltd
Unit 30, 9 Powells Road
Brookvale 2100
New South Wales
Australia

LORIENT

**AAS7503
PERIMETER
SEAL**

INSTALLATION DETAIL

It is not necessary to remove the door from its hinges unless otherwise specified. AAS 7503 can either be mitred or butt jointed at the corners.

STEP 1

Remove the seal from the packaging and measure the existing head (top) and jambs (sides) of the door frame to determine the seal lengths required. Mark with pencil.

STEP 2

Set the decorative cover plate to one side.

STEP 3

Pull back silicone gasket and cut the aluminium carrier to the lengths required, allowing for corner joints.

STEP 4

Cut the decorative cover plate to the lengths required.

STEP 5

Replace silicone gasket back into position and cut to required length.

STEP 6

Position the seals to the door stops along the top and sides of the door frame and mark out the slotted hole locations with a pencil. (Ensure the top corners are neatly mitred or butt-jointed). Drill pilot holes with a 2.5mm drill bit (if required).

STEP 7

Lightly screw-fix each length to the door stops through the slotted holes with the screws supplied. (Fixing holes are preslotted to enable the seal to be accurately adjusted as required).

STEP 8

Close the door and check for a uniform seal around the door by inserting this sheet of paper between the seal and the door face. Resistance should be firm at all points.

STEP 9

Tighten the screws and replace the decorative cover plate.

NOTE

We recommend the AAS 7503 perimeter seal be fitted with any AURA® or LAS drop seal.

INSTALLATION TIP

Should circumstances require that the decorative cover plate be removed, simply insert a flat blade under the top edge and gently prise it off, taking care not to damage the carrier or gasket.

IMPORTANT

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

DISCLAIMER

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete installation detail without prior notice.