

Fitting instructions

Door perimeter upgrade seal

LDPU



Length:.....

The LDPU is used for upgrading fire doors with non-compliant / excessive perimeter clearances. It is approved for use on gaps up to 7mm width. Please check with our technical department for applicable proprietary fire door types and acceptable clearance details.

Contents include:

Self adhesive upgrade strip
Fitting instruction

Tools required:

Tape measure
Pencil
Scissors

For further information about our products please visit our website

www.lorient.com.au

t: +61 (02) 9905 0868
f: +61 (02) 9905 0883
e: admin@lorientau.com.au

Instructions

Important


For effective use and to ensure longevity ensure that the door frame is properly prepared to accept a self adhesive seal: i.e it is clean, dry and de-greased.

1. Measure the head and jambs of the non compliant assembly to determine the seal length requirement.
2. Using scissors, trim the LDPU to length to match the corresponding height and width of the door.
3. Fit seals by peeling back the self-adhesive backing tape and firmly apply the seal to the door reveal ensuring that the adhesive sticks evenly to the frame surface.

Please note: *Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.*

Lorient reserves the right to make alterations or delete installation detail without prior notice.

4. Once fitted, firmly rub over the seal to ensure even adhesions and any air bubbles are excluded.

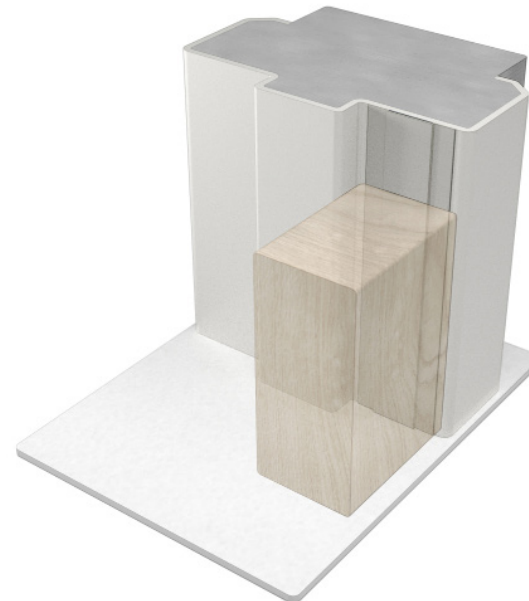

Important

Once applied do not try to remove and relocate seal.

Ensure that the installation of this product does not impede the closing and latching of the fire door assembly.

Other Lorient products:

Acoustic, smoke & fire seals
Fire resistant glazing systems
Fire resistant door hardware
Air transfer grilles/ dampers