


SHAFT WALL ANGLE FREE 5

FIRE RATED PLASTERBOARD SHAFT WALL SYSTEM

DESCRIPTION	
1F	2 x layers of 13mm fire rated plasterboard wall or
1G	2 x layers of 16mm fire rated plasterboard wall.
2	Lorient LVH44 intumescent fire damper.
3	Protected sheet metal riser.
4	Horizontal branch connected to riser with steel fixings or pop rivets.
5	Z275 galvanised steel branch min thickness 0.6mm.
6	Fire damper fixed to casing with 2 x steel screws (100mm centres).
7	Fire damper perimeter sealed with Lorient intumescent sealant.
8	Gap between casing and aperture filled with Lorient intumescent sealant. Backing rod used as required to control sealant fill depth to at least 50mm. Maximum annular gap between casing and wall is 25mm.
9	Casing terminates with breakaway joint as per AS1682.2.

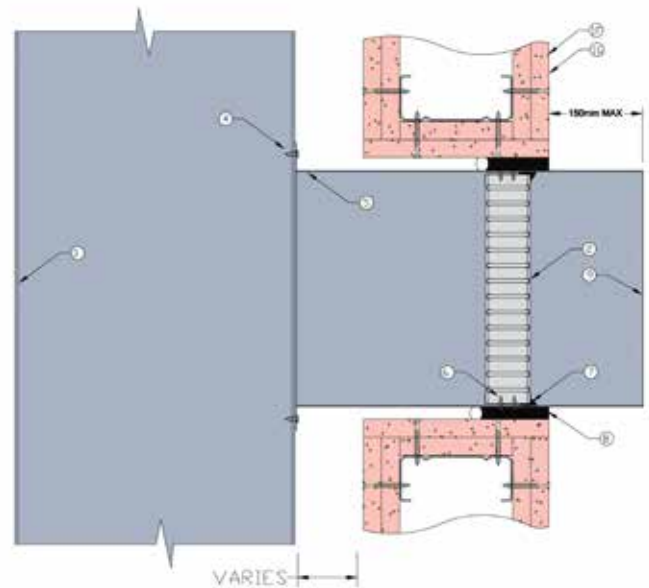

Angle free LVH44 in steel casing connected to sheet metal riser penetrating fire rated Plasterboard shaft wall

FRL -/120/30

Fire Resistance in accordance with

AS1530.4 2014

Approval Ref

EXOVA EWFA 33233400

Max single cell size

600mm x 600mm

INSTALLATION INSTRUCTIONS

- ▶ Measure and mark the position of the damper in the horizontal branch, ensuring that it will be aligned within the shaft wall once the branch is attached to the riser and the shaft wall is constructed.
- ▶ Fix damper into branch with steel screws (point 6) and seal perimeter with Lorient intumescent sealant (point 7).
- ▶ Mechanically fix the branch to the vertical riser with steel screws or pop rivets (point 4).
- ▶ Once shaft wall has been constructed, firestop the gap between the casing and the wall with Lorient intumescent sealant – note fill depth details in point 8.
- ▶ Ductwork shall be connected with breakaway joints, as per point 9.
- ▶ Ensure product identification labels are conspicuously positioned for easy identification.
- ▶ Ensure convenient access is provided to allow for AS1851 inspection and maintenance routines.
- ▶ **Note: Branch / casing and fixings supplied by others.**